




Steinel/Inspextor Integration Guide

This guide provides instruction on how to connect the Steinel HPD2 sensor to the Inspextor Platform


The Steinel HPD2 IP can be connected to an IT infrastructure in two different ways:

1. Directly connecting to the PoE switch
2. Connecting via a PoE injector to a non-PoE switch.

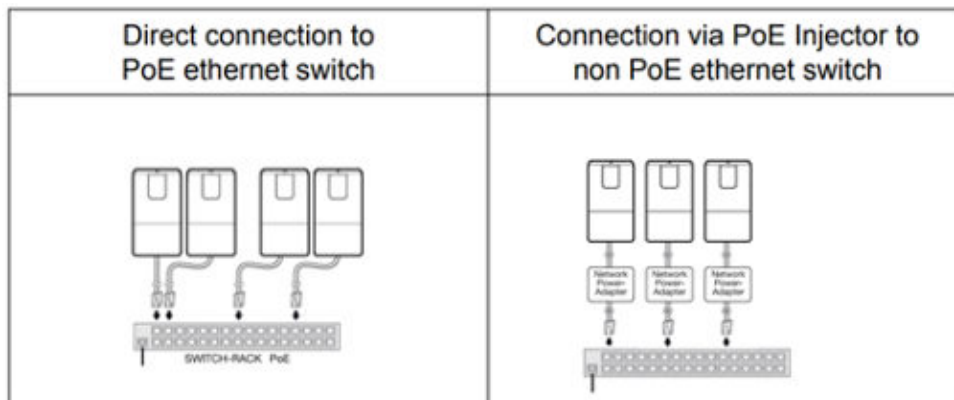

Step 1: Configure via micro-USB

- Power the HPD2 either via KNX or PoE
- Connect a POC or Laptop to the micro-USB port on the underside of the HPD2
- Your PC will now show a new network adapter

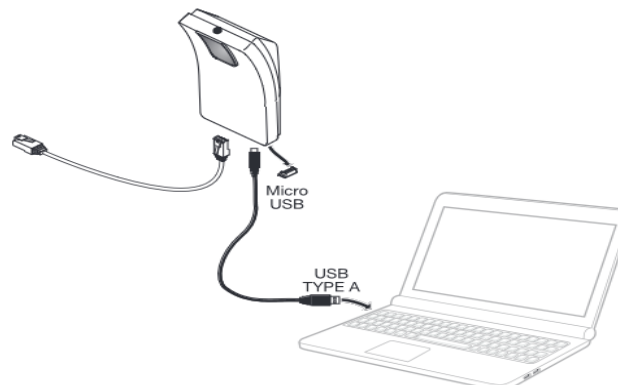


Step 2: Change the IP address of this new network card to 10.88.0.1

Step 3: Enter the IP address of the HPD2 in your browser. The HPD2 IP address via the micro-USB port is 10.88.0.2

Note: The factory default password for initial login is **adm123** and the default password for live picture access is **steinel**

Step 4: Configure the Network Interface settings as outlined below:

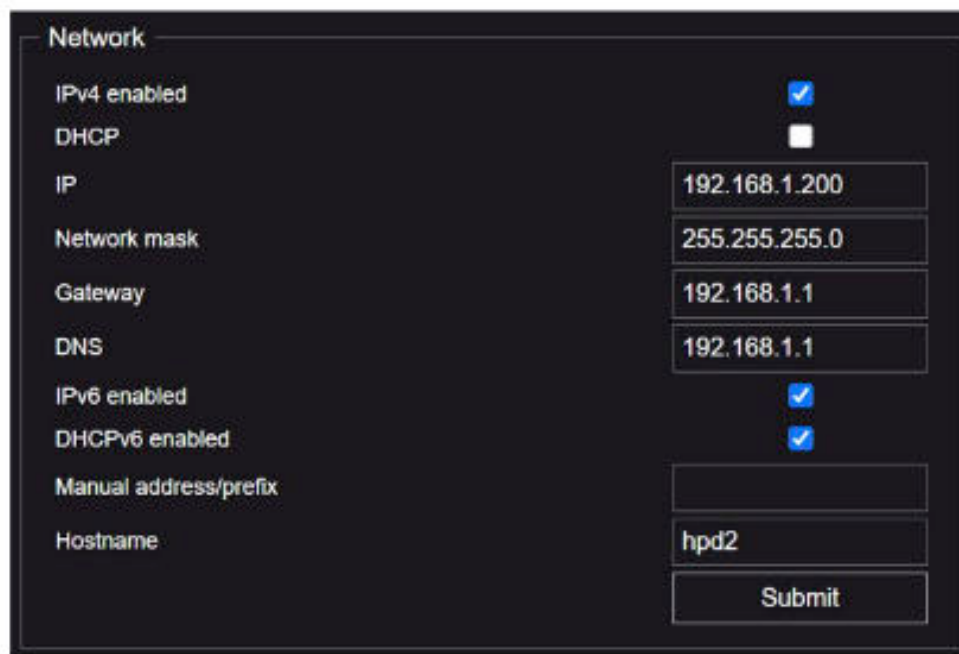

The screenshot shows a network configuration interface with the following settings:

Setting	Value
IPv4 enabled	<input checked="" type="checkbox"/>
DHCP	<input type="checkbox"/>
IP	192.168.1.200
Network mask	255.255.255.0
Gateway	192.168.1.1
DNS	192.168.1.1
IPv6 enabled	<input checked="" type="checkbox"/>
DHCPv6 enabled	<input checked="" type="checkbox"/>
Manual address/prefix	
Hostname	hpd2

Submit

Step 5: Go back to the Inspextor dashboard and select "Set-Up".